

HAFFMANS CPT

CO₂ PURITY TESTER

PRODUCT LEAFLET

GENERAL PRODUCT INFORMATION

In the beer and beverage industries, the quality of carbon dioxide (CO₂) is a determining factor in the product's quality and taste. A low oxygen (O₂) content is crucial to avoid oxygen pick-up in beverages. The CO₂ collected from fermentation is liquified in order to reduce the space needed for storage and to purify the CO₂ from non-condensable gases – O₂ and nitrogen (N₂).

The CO₂ Purity Tester, type CPT, is used for routine controls of the air content of commercial CO₂ gas and CO₂ gas from fermentation. The principle is based on CO₂ absorption by caustic.

The measuring burette of the CPT is properly flushed with CO₂ gas. The CO₂ sample is separated in the measuring burette and the connection is made with the caustic burette. The CO₂ is completely absorbed by the caustic and the remaining gas volume is read on the scale of the measuring burette after turning the instrument on its backside.

Two executions are available:


- Type CPT 99-100, measuring burette scale from 99 - 100 % v/v, for measuring the end purity of commercial CO₂ gas or CO₂ gas from fermentation after purification
- Type CPT 50-100, measuring burette scale from 50 - 100 % v/v, for measuring the intake purity of CO₂ gas from fermentation

BENEFITS

- Perfect product control
- Cost saving
 - less labor intensive – multiple measurements without the need to remove caustic

APPLICATIONS

- Quality Control
 - of gas distribution systems
 - of commercial gas
 - of incoming CO₂ gas from fermentation
 - of CO₂ recovered and purified from fermentation
 - in front of the carbonator to monitor the gas quality dosed
- Optimizing CO₂ Recovery Plants
 - behind the activated carbon filter/dryer
 - in the purge from the CO₂ liquefier to control the blow-off quantity automatically, preventing CO₂ loss as well as high concentrations of O₂ from dissolving CO₂
 - behind the CO₂ evaporator to monitor O₂ in the CO₂ distribution system

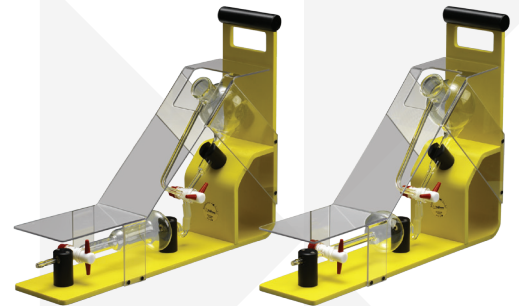

HAFFMANS CPT

CO₂ PURITY TESTER

PRODUCT LEAFLET

TECHNICAL DATA

CPT 99 - 100%

Measuring range

99.0 - 100.0 % v/v CO₂

Graduated scale

99 - 100 % 0.02% v/v foreign gas

Accuracy

99 - 100 % 0.01 %

CPT 50 - 100%

Measuring range

50.0 - 100.0 % v/v CO₂

Graduated scale

94 - 99.8 % 0.1 % v/v foreign gas

55 - 85 % 2.0 % v/v foreign gas

Accuracy

94 - 99.8 % 0.05 %

55 - 85 % 1.0 %

Volume

170 ml caustic solution

Caustic concentration

30 % g/l NaOH with approx. 1 % ethanol

30 % g/l KOH with approx. 1 % ethanol

Dimensions

430 x 110 x 330 (L x W x H mm)

Weight

Ca. 1 kg


SCOPE OF SUPPLY

- CO₂ Purity Tester*
 - Type CPT 99-100 or
 - Type CPT 50-100
- Instruction manual

* When ordering, please state which instrument you require.

OPTIONS

- Certificate of measurement

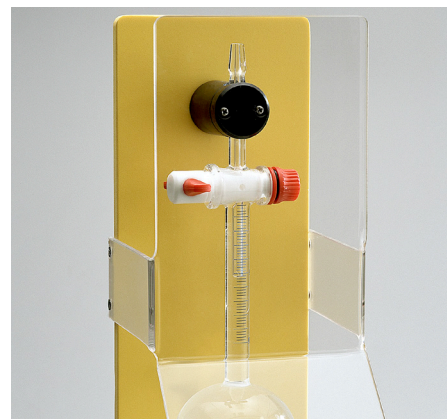

HAFFMANS BV

P.O. BOX 3150 NL-5902 RD VENLO, NETHERLANDS WWW.HAFFMANS.NL

All Pentair trademarks and logos are owned by Pentair, Inc. All other brand or product names are trademarks or registered marks of their respective owners. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice.

Pentair is an equal opportunity employer.

CPT E-4/12 © 2012 Pentair, Inc. All Rights Reserved.

