HD-CR 35 NDT • The new CR standard with TreFoc Technology

Technical Data	HD-CR 35 NDT
Resolution	12.5 – 200 µm continuously adjustable (TreFoc Technology)
BSR (Basic Spatial Res.)	40 µm certified by BAM
Grey level resolution	16 bit, 65.536 grey levels
Dimensions (H \times W \times D)	40 x 37 x 47 cm 15.8" x 14.6" x 18.5"
Weight	17,5 kg 38.6 lbs
Electrical	100 - 240 VAC / 50 - 60 Hz, < 140 W
Temperature range	10 to 35 °C 50 to 95 °F
Noise Level	< 39 dB(A)
Laser Class	I (EN 60825-1: 1994-03 + A1: 2002-07 + A2: 2001-03) + CFR 1040.10
PC-Connection	Ethernet (TCP-IP protocol), W-LAN
Display	4.3" TFT, 800 x 480 px
Storage	SDHC, max 32 GB
Software	DÜRR NDT D-Tect
IT-Requirements	For requirements refer to www.duerr-ndt.com

Accessories

Transport Case Lightweight case for scanner transport.

Battery pack Lithium-ion battery for standalone operation of the scanner without mains voltage.

Image plates (IP)

IPs are available in different qualities and all standard formats and, on request, in special sizes and forms.



DÜRR NDT GmbH & Co. KG Höpfigheimer Straße 22 74321 Bietigheim-Bissingen Germany

www.duerr-ndt.com

info@duerr-ndt.de



an QR-Code or vi

hand made in Germany

HD-CR 35 NDT

Image Plate Scanner





HD-CR 35 NDT • Discover the benefits of Digital Radiography

What is CR? How does it work?

Computed Radiography (CR) is the acquisition of a digital image by using a Phosphor Imaging Plate (IP) in place of conventional film.

Key advantages of CR include:

- IP's are reusable
- No dark room or chemicals required
- Exposure and process times reduced
- Easy work flow and image optimisation with D-Tect software
- Simple to share and archive digital information

The CR technology consists of a 3-step process.

The Image (storage) Plate (IP) is exposed with X-ray or gamma radiation, which causes the phosphor layer in the plate to store the latent image.

During the reading process of the plate in the scanner, a focussed laser beam triggers the release of the stored image data in form of visible light.

The emitted light is detected, captured and converted into electrical signals which are digitized and finally displayed as a digital image on the PC monitor.

The internal in-line eraser removes the residual data from the IP, which is then ready for the next exposure.

What is important?

With film radiography the only variable is the film. With CR we have different IP's and the ability to adjust up to 4 parameters within the scanner to optimise the image quality to suit the required inspection task.

High definition Computed Radiography

DÜRR NDT is the first company worldwide that has developed a scanner with a 12,5 µm laser spot. When used with correspondingly high resolution phosphor storage plates, this meets all the stringent requirements of EN 14784, EN 17636 and ASTM E2446.

The combination of high resolution image plates and this HD-CR device achieves the unique Basic Spatial Resolution of 40 μ m over all system classes for the first time. (Certified by BAM).

Adjustable resolution

The unique TreFoc Technology can be found in the HD-CR 35 NDT. This always sets the laser beam in relation to the image plate and the object to be examined, so that the maximum resolution is achieved, while simultaneously attaining the optimal signal-to-noise ratio.

Cost Reduction

D Improved handling

Increased efficiency



Acceptance Perfect image quality – film-like or better



Significant reduction of consumables

Benefit



Experience Technology proven in more than 25.000 units



MADE IN GERMANY

Development and production in Germany

HD-CR 35 NDT • Certified and proven reliability

Why CR technology from DÜRR NDT

When selecting an image plate scanner from DÜRR NDT, the user receives a system perfectly tailored for use in non-destructive examination.

All devices are BAM-certified and correspond to the relevant EN and ASTM standards. Compliance with the DICONDE standard is, of course, also provided, as is production in accordance with ISO 9001.



TreFoc Technology • Three scanners in one

What does TreFoc Technology mean and how does it work?

Trefoc *

TreFoc Technology

TreFoc Technology is the name for the our new laser focussing technology, uniquely in systems from DÜRR NDT. With TreFoc the laser beam is adjusted perfectly to give optimal image results and the lowest signal-to-noise ratio in any application.


Inside the laser tube, an iris diaphragm adjusts the laser beam diameter. Since the perfect laser beam diameter can be selected for each object and image type, optimum results for any particular application can be easily achieved.

Regardless of the application - high-resolution image or low-exposure corrosion measurement - the unique TreFoc Technology give perfect image results with the best SNR every time.

The principle of changing the laser beam diameter takes into consideration the maximum resolution of the image plates available on the market.

So every image plate type can be read with a laser beam focussed specifically for that plate, thus always achieving the best image with the lowest noise.

Digital radiography has never been more intelligent!

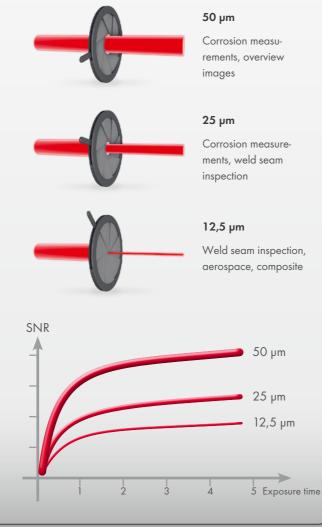



TreFoc Technology Always perfect results!



Crystal clear Automatic laser adjustment for optimum SNR values




Data security Simplified archiving and data sharing



Logical Easy and fast use through intuitive operating concepts



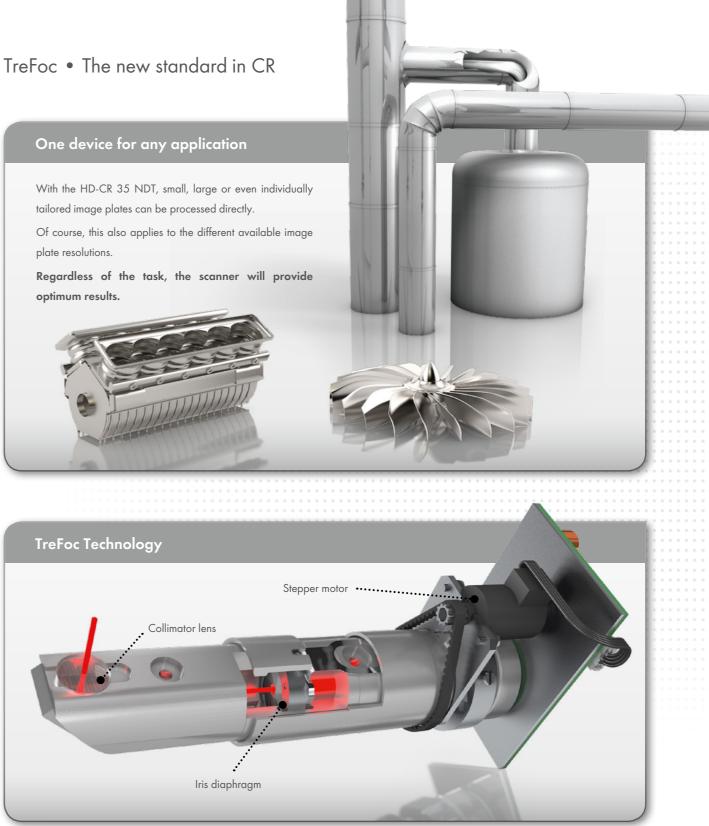



Clockwork precision No artefacts thanks to high precision components



Intelligent Individually adjustable to your preferences



Wireless Wireless connetion to the network



Network / Stand-alone Easily connected to the network or installed as single station

HD-CR 35 NDT • Innovative - Ultra-compact - Unique

Touchscreen

The entire control of the device can, if required, be carried out via the high definition colour touchscreen.

Eraser

Directly after the scan, highperformance LEDs reliably erase all information from the image plate.

Drive

Thanks to the newly improved drive concept, it has proven possible to further significantly enhance the image quality.

SD memory card

All images can be safely stored in offline operation on the up to 32 GB SD memory card.



Wireless

With a standard wireless interface, the system can be connected without cables. 0

The ultra-compact design has been achieved through the latest production processes.

Ultra-compact

Ultra-portable

The lightest full format scanner on the market.

Capsuled

Use of the latest technology enables operation without any fans and thus with minimum maintenance.

Robust case

The robust case ensures safe transport and offers holders for the optional battery packs.

Battery pack

With the optional battery pack, the device can be operated fully independently.

HD-CR 35 NDT • Always the perfect solution

HD-CR 35 NDT • Multitalented thanks to TreFoc Technology

The perfect solution for any application

The connection of the image plate scanner and built-in mini PC with the colour display and a memory card of up to 32 GB makes the new HD-CR 35 NDT the perfect system for any application in non-destructive testing.

Whether used in a mobile application, the production process or code-compliant testing, the new HD-CR 35 NDT supports you with optimum flexibility and image quality.

O	Built-in mini PC
0	Colour touchscreen display

Online and offline operation

Mobile use with decentralised scan of IPs





D-Tect • The perfect software solution

D-Tect • The perfect partner for your applications

The software from DÜRR NDT for all digital systems

D-Tect software is completely developed in-house by DÜRR NDT, and is the perfect complement to all our digital systems – image plate scanners and flat panel detectors.

DICONDE

Since D-Tect supports the DICONDE standard, the user can be certain that images can be archived, exported and then viewed on any other DICONDE compliant system, or simply transferred to that system. On request, DÜRR NDT offers even more optional functions in addition to the standard DICONDE functions.

ALL-IN-ONE

D-Tect is an ALL-IN-ONE solution. All functions from image acquisition, analysis and related report generation, to export, archiving and database management are included.

Individually tailored, perfectly adapted

So that the processes, which differ slightly from company to company, can be represented perfectly, we are happy to tailor an individual solution to your needs. The software then perfectly meets your requirements and the established processes can be retained.

D-Tect DÜRR N D T

A versatile software platform with solutions for every application



Signal-to-noise ratio (SNR)


The SNR measurement required by the relevant standard is carried out simply by clicking in the relevant image area. The normalised SNR is calculated automatically, provided that the BSR has first been determined in D-Tect.



1:1 display

In production processes, the 1:1 display of the tested components is repeatedly required. DÜRR NDT has developed a solution for this, which reliably displays the original size of the test object at any time.



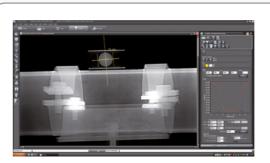


Calibration

Automatic calibration using a ball bearing or any other object with a known dimension, like the outer dimension of a pipe.



Report

Report function. Gives the user the opportunity to produce a report populated with the information and data along with thumbnail images. We provide the template to your requirements.

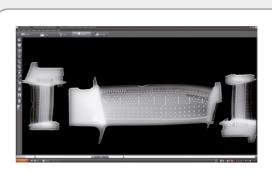

Aerospace

Ideal for Aerospace applications where consistent quality and highest resolution are required.



BSR

Automatic tool to determine the BSR of an image in accordance with EN17636-2.



Wall thickness

Automatic measurement tool, single point or multiple measurements along a straight line or around a curve. Set up to give warnings when wall loss reaches a critical level.



Tailored to fit your needs

A versatile software platform that provides the information and data which is relevant for your particular application and workflow.